

Permanent lifting magnet

ELM

Serial number:

Date of purchase:

This manual is for ELM types: ELM.150, ELM.300, ELM.600, ELM.1000 and ELM.2000

Congratulations on purchasing this premium permanent lifting magnet. At Euroboor we strive to exceed our customers' expectations by developing and providing premium and innovative portable drilling, cutting and lifting solutions. We believe that a professional like you must be able to rely on a professional supplier. Which has led us to become a major player in the industrial world, with our own factory and several offices worldwide. All because we have always listened to our customers and to the demands from the market.

Our vision is focused on developing innovative portable tools that add value for our customers and facilitate them in their daily work. We never lose sight of sustainability, time savings and cost savings.

Enjoy your new lifting magnet!

Before operating your new permanent lifting magnet, please first read all instructions. You find the instructions in this manual and on the warning label on your lifting magnet. With proper use, care and maintenance your lifting magnet will provide you with years of premium performance.

TO REDUCE THE RISK OF INJURY USER MUST READ AND UNDERSTAND ALL INSTRUCTIONS

To view all our offices and their contact information please visit: www.euroboor.com

Table of contents

1. Safety	4
1.1. General safety instructions	4
1.2. Delivery	4
1.3. Warranty and service	5
2. Construction and specifications	6
2.1. Construction	6
2.2. Specifications	7
3. Operation	9
3.1. Prior to use	9
3.2. Main factors which influence the lifting capacity	11
3.3. Calculation example	11
3.4. ELM.150 Lifting capacity overview	12
3.5. ELM.300 Lifting capacity overview	13
3.6. ELM.600 Lifting capacity overview	14
3.7. ELM.1000 Lifting capacity overview	15
3.8. ELM.2000 Lifting capacity overview	16
4. Maintenance and safety	17
5. Environmental	18

1. Safety

1.1 General safety instructions

Do not use this lifting magnet before you have thoroughly read and completely understood this manual, specifically the “General safety instructions” including the figures, specifications, safety regulations and the signs indicating DANGER, WARNING and CAUTION. Please also observe the relevant national industrial safety regulations. Non-observance of the safety instructions can lead to severe injuries.

This manual should be kept for later use and enclosed with the lifting magnet, should it be passed on or sold.

Work area

1. Keep your work area clean and well lit. Cluttered and dark work areas increase the chance of accidents.
2. Keep bystanders, children and visitors away while using a lifting magnet. Distractions can cause you to lose control.
3. Never stand or walk underneath the hoisting load.
4. Guide the load by holding the corners, make sure to keep the load away from your body.
5. Never transport your workpiece with the lifting magnet over or past people.
6. Never use the lifting magnet for transporting or lifting people.
7. Always warn people who are around your working area when you start your lifting job.
8. Never leave a hoisted lifting magnet unattended.

Personal safety

1. Stay alert, watch what you are doing and use common sense when using a lifting magnet. Do not use the lifting magnet while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating a lifting magnet may result in serious personal injury.
2. Dress properly. Do not wear magnetizable clothing or jewelry.
3. Use safety equipment. Always wear non-skid safety shoes and a hard hat for optimal safety.
4. Users of the lifting magnet who have a pacemaker or other medical equipment should never use the lifting magnet without first consulting a medical specialist.

1.2 Delivery

The complete delivery of your Euroboor lifting magnet consists of:

- Euroboor lifting magnet
- User manual
- Test certificate

Note: Always check your lifting magnet on delivery. If the lifting magnet is damaged or incomplete immediately contact your supplier or Euroboor.

1.3 Warranty and service

Warranty

Euroboor B.V. warrants this lifting magnet to be free of material defects and workmanship errors under normal use for a period of 12 months after date of purchase.

This 12 month period can be extended to 24 months in total by registering the product on our website: <https://euroboor.com/support/register/>.

This warranty expires when:

- The operating and maintenance instructions as stated in this manual have not been followed
- The use of the lifting magnet is considered as being other than normal
- Natural wear and tear cause by use in accordance with operating instructions
- Repairs or replacements are not in accordance to and done by specifications by Euroboor or any authorized Euroboor dealer.

Service

To maximize the lifetime of your Euroboor lifting magnet always use service and parts from an official Euroboor distribution channel. Whenever in need of such, always contact original point of sales or if no longer existent the distributor of Euroboor products in your country.

2. Construction and specifications

2.1 Construction

All Euroboor lifting magnets (ELM) have been produced with NdFeB magnetic materials. To switch the magnet on and off, you turn the handle which can be found on the side of the lifting magnet. On top of the lifting magnets you find shackles for lifting and the bottom of the lifting magnets are equipped with a V slot for lifting cylindrical workpieces.

Never use the handle to switch the magnet on without using an hoisting load.

On the top of the lifting magnet you also find a small slider, which pulls in and pushes out the safety bolt. This safety bolt ensures that the handle stays in to "on" position while you are working on your lifting job.


2.2 Specifications

Metric

ELM types	Rated lifting strength	L	B	H1	H2	B1	F	G	Dead weight
	kg	mm	mm	mm	mm	mm	mm	mm	Kg
ELM.150	150	193,5	76,0	76,5	58,0	170,0	35,0	30,0	6,5
ELM.300	300	220,0	81,5	82,5	77,0	215,0	46,0	40,0	9,4
ELM.600	600	301,0	112,0	108,0	87,0	340,0	57,0	42,0	21,2
ELM.1000	1000	336	148	138	96	388	59	52	43
ELM.2000	2000	559	154	195	100	471	63	52	95.2

Imperial

ELM types	Rated lifting strength	L	B	H1	H2	B1	F	G	Dead weight
	lbs	inch	inch	inch	inch	inch	inch	inch	Lbs
ELM.150	331	7 5/8	3	3	2 5/16	6 11/16	1 3/8	1 3/16	14,3
ELM.300	661	8 11/16	3 3/16	3 1/4	3 1/16	8 7/16	1 13/16	1 9/16	20,7
ELM.600	1323	11 7/8	4 7/16	4 1/4	3 7/16	13 3/8	2 1/4	1 5/8	46,7
ELM.1000	2000	13 7/32	5 27/32	5 13/32	3 25/32	15 9/32	2 5/16	2 1/16	94.8
ELM.2000	4000	22	6 3/8	6 1/16	3 15/16	18 17/32	2 15/32	2 1/16	209.9

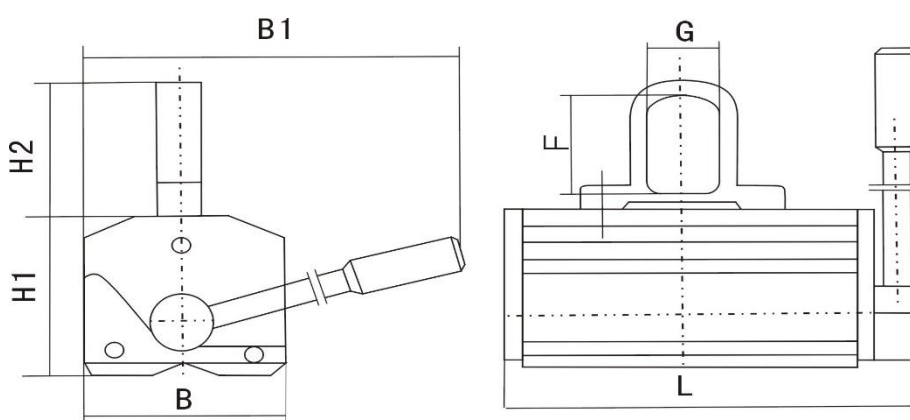

Warning: Always ensure that the weight and dimensions of the workpiece do not exceed the maximum permitted values.

Metric

Model	Load Plate Max	Load round Max	Plate Min Thickness	Round Min-max thickness	Work max. length	Operation temperature
	kg	kg	mm	mm	mm	°C
ELM.150	150	72	15	Ø 40 - Ø 80	2000	<80
ELM.300	300	150	25	Ø 50 - Ø 100	2500	<80
ELM.600	600	300	30	Ø 100 - Ø 250	3000	<80
ELM.1000	1000	500	40	Ø 150 - Ø 380	3500	<80
ELM.2000	2000	1000	55	Ø 180 - Ø 450	4000	<80

Imperial

Model	Load Plate Max	Load round Max	Plate Min Thickness	Round Min-max thickness	Work max. length	Operation temperature
	lbs	lbs	inch	inch	inch	°F
ELM.150	331	159	19/32	Ø 1 37/64 - Ø 3 5/32	78 47/64	<176
ELM.300	661	331	63/64	Ø 1 31/32 - Ø 3 15/16	98 27/64	<176
ELM.600	1323	661	1 3/16	Ø 3 15/16 - Ø 9 27/32	118 7/64	<176
ELM.1000	2000	1000	1 37/64	Ø 5 29/32 - Ø 14 61/64	137 51/64	<176
ELM.2000	4000	2000	2 11/64	Ø 7 3/32 - Ø 17 23/32	157 31/64	<176

3. Operation

3.1 Prior to use

Check the lifting magnet for possible damage; Before using the lifting magnet, you must carefully check the protective components or slightly damaged components to ensure they are operating perfectly and as intended.

Damaged protective components must be repaired or replaced according to specifications by Euroboor or any authorized Euroboor dealer.

DO NOT let children come into contact with the lifting magnet. Supervision is required when inexperienced operators use this lifting magnet.

- **Never** lift more than one workpiece at a time.
- **Never** lift more than the capacity of the lifting magnet you are using.
- The magnet must remain fully horizontal during transport of the workpiece.

Activating the Lifting Magnet

1. During operation always make sure the surface on which you are going to attach the lifting magnet is clear of any rust, burr and debris. This ensures that the lifting magnet has an optimized lifting capacity.
2. Only switch the magnet to the "On" position when you have placed it correctly on the workpiece.
3. Turn the lever counterclockwise from 'OFF' to 'ON'.
4. Continue turning until you hear a click, indicating the mechanical lock is engaged.
5. Verify that the lever is securely locked by attempting to turn it back clockwise.
6. A properly locked lever will not move back.
7. Start your lifting job.



Warning: Overloading is forbidden. Never let anybody walk underneath the workpiece you are lifting.



Warning: Never place the magnet over a large hole or bore.



Warning: Never release the handle before the slider has locked it in position

Always make sure that the temperature of the components as well the ambient temperature is between 80°C to -40°C. Minimize vibrations and avoid impact and collisions.

Note: When you are lifting cylindrical workpieces always make sure the cylindrical workpiece contacts both V slots of the lifting magnet. The actual lifting capacity will generally be 30% of the rated lifting capacity (see chapter 4.2).

- Only switch the magnet to the “Off” position when you have placed the workpiece on a stable surface.

Deactivating the Lifting Magnet

1. Ensure the workpiece is resting securely on a solid surface before disconnecting the lifting magnet.
2. Press the disconnect button located at the top of the lever to release the safety lock.
3. Carefully turn the lever clockwise from 'ON' to 'OFF'.
4. Once the lever is fully in the 'OFF' position, the magnetic force will be sufficiently reduced, allowing the magnet to detach from the workpiece.

Note: Some residual magnetic force may remain, causing slight resistance when disconnecting the magnet. This will naturally dissipate after disconnection.

Note: After having finished your lifting job, light workpieces and other small magnetizable material might stick to the magnet after it has been switched off.

3.2 Main factors which influence the lifting capacity

Before you start your lifting job always check the safety by looking at the thickness of the workpiece, the quality of the workpiece and the composition of the steel component.

In the below instructions and matrices you can calculate the save capacity of the lifting magnet.

- Thickness of the workpiece
In general when the thickness of the workpiece (S) is increasing the lifting capacity is also increasing. The lifting capacity of the magnet will never exceed the maximum lifting capacity of the magnet
- Quality of the workpiece.
You have to calculate the surface roughness (Ra) of your workpiece. If the surface roughness is less than 6.3 μm , there will be no negative impact of the lifting capacity of the magnet based on the airgap (Δ). If the surface roughness is above 6.3 μm you need to calculate the airgap. The airgap will negatively influence the lifting capacity of the magnet. You can find a detailed overview in below matrices.
- The composition of the steel component.
Various materials have influence on the maximum capacity of the magnet. The in the below mentioned matrices lifting capacity of the magnet based on the thickness of the workpiece (S), airgap (Δ) and shape of the workpiece must be multiplied by the percentage related to the composition of the workpiece. You can find the material related percentage in matrix 3.2.1


Workload limit for various materials (Matrix 3.2.1)	
Material	Percentage (%)
St 37 (S 235 JR)	100%
E 295 (St 52)	96%
Cast steel	90%
Stainless steel 430 F	50%
Cast iron	45%
Nickel	10%

3.3 Calculation example

Below you find an example how to calculate the lifting capacity of your magnet. Calculations should always be done with the actual figures related to the workpiece.

Lifting Magnet	ELM.150
Maximum capacity	150 kg / 331 lbs
The thickness of the workpiece (S)	10 mm
Airgap (Δ)	0.2 mm
Material	Cast steel

Max capacity	Thickness based capacity	Airgap based capacity	Material influence	Actual maximum capacity
150kg	108kg	78kg	90%	78kg x 90% = 70,2kg

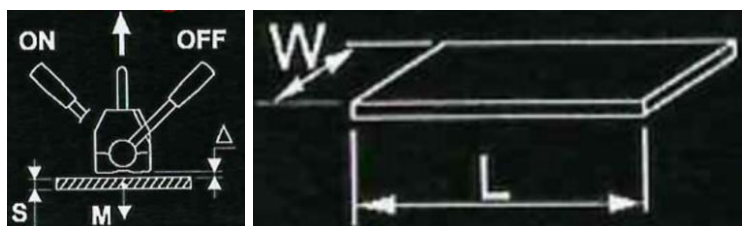

3.4 ELM.150 Lifting capacity overview

	▲ < 0.1 mm			▲ = 0.1 - 0.3 mm			▲ = 0.3 - 0.5 mm		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 15 mm	1500mm	1000 mm	150 kg	1500 mm	1000 mm	108 kg	1200 mm	800 mm	78 kg
S = 10 mm	1200mm	800 mm	102 kg	1200 mm	800 mm	78 kg	1000 mm	500 mm	54 kg
S = 5 mm	1000mm	500 mm	60 kg	1000 mm	500 mm	48 kg	800 mm	500 mm	30 kg
Ø40 - Ø80 mm	2000 mm	-	72 kg	1850 mm	-	60 kg	1700 mm	-	36 kg

	▲ < 0.0039 inch			▲ = 0.0039 - 0.012 inch			▲ = 0.012 - 0.0197 inch		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 19/32 inch	59-1/16 inch	39-3/8 inch	331 Lbs	59-1/16 inch	39-3/8 inch	238 Lbs	47-1/4 inch	31-1/2 inch	172 Lbs
S = 25/64 inch	47-1/4 inch	31-1/2 inch	225 Lbs	47-1/4 inch	31-1/2 inch	172 Lbs	39-3/8 inch	19-11/16 inch	119 Lbs
S = 13/64 inch	39-3/8 inch	19-11/16 inch	132 Lbs	39-3/8 inch	19-11/16 inch	106 Lbs	31-1/2 inch	19-11/16 inch	66 Lbs
Ø 1-37/64 inch - 3-5/32 inch	78-47/64 inch	-	159 Lbs	72-53/64 inch	-	132 Lbs	66-59/64 inch	-	79 Lbs

3.5 ELM.300 Lifting capacity overview

	▲ < 0.1 mm			▲ = 0.1 - 0.3 mm			▲ = 0.3 - 0.5 mm		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 25 mm	2000 mm	1500 mm	300 kg	2000 mm	1500 mm	228 kg	1500 mm	1000 mm	144 kg
S = 15 mm	2000 mm	1200 mm	240 kg	2000 mm	1200 mm	180 kg	1500 mm	1000 mm	120 kg
S = 10 mm	1500 mm	1200 mm	216 kg	1500 mm	1000 mm	162 kg	1100 mm	1000 mm	102 kg
S = 8 mm	1500 mm	1000 mm	144 kg	1500 mm	1000 mm	114 kg	1100 mm	800 mm	78 kg
S = 6 mm	1200 mm	800 mm	84 kg	1000 mm	800 mm	66 kg	900 mm	800 mm	42 kg
Ø50 - Ø100 mm	2500 mm	-	150 kg	2500 mm	-	114 kg	2000 mm	-	72 kg

	▲ < 0.0039 inch			▲ = 0.0039 - 0.012 inch			▲ = 0.012 - 0.0197 inch		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 63/64 inch	78-47/64 inch	59-1/16 inch	661 Lbs	78-47/64 inch	59-1/16 inch	503 Lbs	59-1/16 inch	39-3/8 inch	317 Lbs
S = 19/32 inch	78-47/64 inch	47-1/4 inch	529 Lbs	78-47/64 inch	47-1/4 inch	397 Lbs	59-1/16 inch	39-3/8 inch	265 Lbs
S = 25/64 inch	59-1/16 inch	47-1/4 inch	476 Lbs	59-1/16 inch	39-3/8 inch	357 Lbs	43-5/16 inch	39-3/8 inch	225 Lbs
S = 5/16 inch	59-1/16 inch	39-3/8 inch	317 Lbs	59-1/16 inch	39-3/8 inch	251 Lbs	43-5/16 inch	31-1/2 inch	172 Lbs
S = 15/64 inch	47-1/4 inch	31-1/2 inch	185 Lbs	39-3/8 inch	31-1/2 inch	146 Lbs	35-7/16 inch	31-1/2 inch	93 Lbs
Ø 1-31/32 inch - 3-15/16 inch	98-27/64 inch	-	331 Lbs	98-27/64 inch	-	251 Lbs	78-47/64 inch	-	159 Lbs

3.6 ELM.600 Lifting capacity overview

	▲ <0.1 mm			▲ = 0.1 - 0.3 mm			▲ = 0.3 - 0.5 mm		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 30 mm	3000 mm	1500 mm	600 kg	3000 mm	1500 mm	456 kg	2500 mm	1500 mm	312 kg
S = 20 mm	2500 mm	1500 mm	456 kg	2500 mm	1500 mm	336 kg	2000 mm	1500 mm	228 kg
S = 15 mm	2000 mm	1500 mm	360 kg	2000 mm	1500 mm	264 kg	1800 mm	1500 mm	180 kg
S = 10 mm	1500 mm	1500 mm	264 kg	1500 mm	1500 mm	204 kg	1200 mm	1000 mm	132 kg
Ø100-Ø250 mm	3000 mm	-	300 kg	3000 mm	-	240 kg	2500 mm	-	180 kg

	▲ <0.0039 inch			▲ = 0.0039 - 0.012 inch			▲ = 0.012 -0.0197 inch		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 1 3/16 inch	118-7/16 inch	59-1/16 inch	1323 Lbs	118-7/16 inch	59-1/16 inch	1005 Lbs	98-27/64 inch	59-1/16 inch	688 Lbs
S = 25/32 inch	98-27/64 inch	59-1/16 inch	1005 Lbs	98-27/64 inch	59-1/16 inch	741 Lbs	78-47/64 inch	59-1/16 inch	503 Lbs
S = 19/32 inch	78-47/64 inch	59-1/16 inch	794 Lbs	78-47/64 inch	59-1/16 inch	582 Lbs	70-55/64 inch	59-1/16 inch	397 Lbs
S = 25/64 inch	59-1/16 inch	59-1/16 inch	582 Lbs	59-1/16 inch	59-1/16 inch	450 Lbs	47-1/4 inch	39-3/8 inch	291 Lbs
Ø 3-15/16 inch - 9-27/32 inch	118-7/16 inch	-	661 Lbs	118-7/16 inch	-	529 Lbs	98-27/64 inch	-	397 Lbs

3.7 ELM.1000 Lifting capacity overview

	▲ < 0.1 mm			▲ = 0.1 - 0.3 mm			▲ = 0.3 - 0.5 mm		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 40 mm	3000 mm	2000 mm	1000 kg	3000 mm	2000 mm	750 kg	2500 mm	1500 mm	650 kg
S = 30 mm	3000 mm	2000 mm	800 kg	3000 mm	2000 mm	600 kg	2500 mm	1500 mm	400 kg
S = 20 mm	2500 mm	1500 mm	600 kg	2500 mm	1500 mm	450 kg	2000 mm	1000 mm	300 kg
S = 15 mm	2500 mm	1500 mm	500 kg	2500 mm	1500 mm	380 kg	2000 mm	1000 mm	230 kg
S = 10 mm	2000 mm	1000 mm	350 kg	2000 mm	1000 mm	260 kg	1500 mm	1000 mm	180 kg
∅150-∅380 mm	3500 mm	-	500 kg	3000 mm	-	380 kg	2500 mm	-	320 kg

	▲ < 0.0039 inch			▲ = 0.0039 - 0.012 inch			▲ = 0.012 - 0.0197 inch		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 1 37/64 inch	118-7/16 inch	78-47/64 inch	2000 lbs	118-7/16 inch	78-47/64 inch	1500 lbs	98-27/64 inch	59-1/16 inch	1300 lbs
S = 1 3/16 inch	118-7/16 inch	78-47/64 inch	1600 lbs	118-7/16 inch	78-47/64 inch	1200 lbs	98-27/64 inch	59-1/16 inch	800 lbs
S = 25/32 inch	98-27/64 inch	59-1/16 inch	1200 lbs	98-27/64 inch	59-1/16 inch	900 lbs	78-47/64 inch	39-3/8 inch	600 lbs
S = 19/32 inch	98-27/64 inch	59-1/16 inch	1000 lbs	98-27/64 inch	59-1/16 inch	760 lbs	78-47/64 inch	39-3/8 inch	460 lbs
S = 25/64 inch	78-47/64 inch	39-3/8 inch	700 lbs	78-47/64 inch	39-3/8 inch	520 lbs	59-1/16 inch	39-3/8 inch	360 lbs
∅ 5-29/32 Inch - 14-61/64 inch	137-1/64 inch	-	1000 lbs	118-7/16 inch	-	760 lbs	98-27/64 inch	-	640 lbs

3.8 ELM.2000 Lifting capacity overview

	▲ < 0.1 mm			▲ = 0.1 - 0.3 mm			▲ = 0.3 - 0.5 mm		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 55 mm	3500 mm	2000 mm	2000 kg	3500 mm	1850 mm	1500 kg	3000 mm	2000 mm	1000 kg
S = 45 mm	3500 mm	2000 mm	1800 kg	3500 mm	1850 mm	1350 kg	3000 mm	2000 mm	900 kg
S = 35 mm	3000 mm	2000 mm	1500 kg	3000 mm	1800 mm	1150 kg	2500 mm	1500 mm	750 kg
S = 20 mm	2500 mm	1500 mm	900 kg	2500 mm	1200 mm	680 kg	2000 mm	1000 mm	450 kg
S = 15 mm	2500 mm	1500 mm	500 kg	2500 mm	1100 mm	380 kg	2000 mm	1000 mm	250 kg
Ø180-Ø450 mm	4000 mm	-	1000 kg	3500 mm	-	750 kg	3000 mm	-	600 kg

	▲ < 0.0039 inch			▲ = 0.0039 - 0.012 inch			▲ = 0.012 - 0.0197 inch		
	L max	W max	M max	L max	W max	M max	L max	W max	M max
S ≥ 2 11/64 inch	137-51/64 inch	78-47/64 inch	4000 lbs	137-51/64 inch	72-53/64 inch	3000 lbs	118-7/16 inch	78-47/64 inch	2000 lbs
S = 1 49/64 inch	137-51/64 inch	78-47/64 inch	3600 lbs	137-51/64 inch	72-53/64 inch	2700 lbs	118-7/16 inch	78-47/64 inch	1800 lbs
S = 1 3/8 inch	118-7/16 inch	78-47/64 inch	3000 lbs	118-7/16 inch	70-55/64 inch	2300 lbs	98-27/64 inch	59-1/16 inch	1500 lbs
S = 25/32 inch	98-27/64 inch	59-1/16 inch	1800 lbs	98-27/64 inch	47-1/4 inch	1360 lbs	78-47/64 inch	39-3/8 inch	900 lbs
S = 19/32 inch	98-27/64 inch	59-1/16 inch	1000 lbs	98-27/64 inch	43-5/16 inch	760 lbs	78-47/64 inch	39-3/8 inch	500 lbs
Ø 7-3/32 inch - 17-23/32 inch	157-31/64 inch	-	2000 lbs	137-51/64 inch	-	1500 lbs	118-7/16 inch	-	1200 lbs

4. Maintenance and safety

While carrying and using the lifting magnet beware of bumping into objects in your work area and the roughness of the surfaces you are working on, as not to damage your lifting magnet and your surroundings.

After having used the lifting magnet and before storing it, you can use oil to protect the lifting magnet.



Warning : Please read this user manual carefully and thoroughly before using the lifting magnet.

- Always use a hook equipped with a safety latch to attach to your lifting magnet.
- Check the slider on top of your magnet and the safety bolt regularly. Make sure that slider can move flexibly and that the safety bolt locks firmly.
- When your lifting magnet is not in contact with ferromagnetic material then don't try to turn the handle (you will notice that this is also almost impossible to do).
- Maintenance of your lifting magnet but be done by strictly following the instructions and only by professionals.
- It is prohibited to modify the lifting magnet in any way as this may affect the safety.
- The lifting magnet has to undergo a capability test every year to check the safety of all the component to ensure safe use.
- Whenever the main body and/or turning parts are damaged beyond repair, the lifting magnet has to be discarded.
- Never remove warning or instruction plates from the lifting magnet

5. Environmental



Separate collection. This product must not be disposed of with normal household waste.



Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.